


Scanning:

Pin(or press) the switch on the back of transmitter fo, see picture 1, and turn on the power at the same time. The blue light on the panel of transmitter will blink. Then you plug the scanning wire into the scanning chanel of Receiver, see picture 2, then connect the power. The red light of the receiver will light for 2 times, then the red light will blink. Then there will be fast blinking because it is doing scanning. After scanning, the red light will be dark. Then turn off the power of receiver, and remove the scanning wire. And then turn off the power of transmitter.

Now you re-start the transmitter: first, turn on the power of transmitter, then connect the power of receiver (the red light will light for some time, and no blinking). Third, ensure all channels can work properly. Now everything is ok.



Picture 1

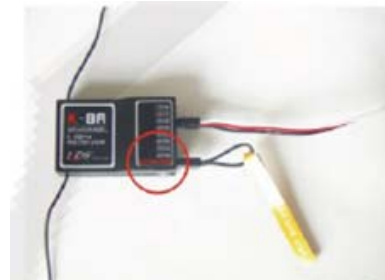

Picture 2

