



产品型号: Master-cp  
Model NO.: Master-cp  
最新版本: V1.0  
[Latest version:V1.0](#)

日期 Date	更新历史 Update history	软件下载 download
2012-9-4	Master-cp 双向传输程序文件 V1.0.版本发布 Master-cp telemetry programme document v1.0 version released	Master_CP-DT.bin

最新版本更新说明

[latest version update details](#)

升级注意事项:

**Note:**

1. 升级程序需使用 UP02 及 UP02 适配器为升级工具

**1: It's necessary to use the UP02 and UP02 adaptor for this upgrade steps.**


2. 本次程序提供双向传输功能升级

**2: The program provides two-way transmission function upgrade**

电脑安装好 UP02 软件, 在 USB 端口插入 UP02, 并打开软件升级界面, 点击“connect”使通信端口联接上; 按下图接好 UP02 适配器的三色插头到接收器上, 再接上电池


[Install the UP02 software in the PC, connect the UP02 with the USB, and open the software upgrade interface, click “Close” connect with software;](#)

[Please refer to below illustration and connect the UP02 adaptor with the receiver, and then connect with the battery.](#)

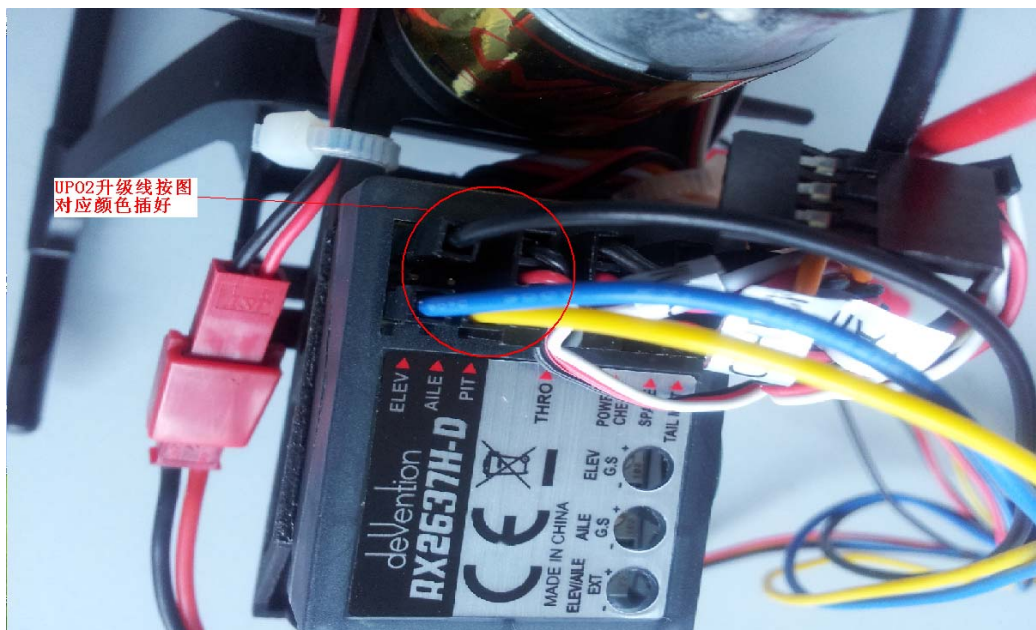

在下面界面会出现已检测的机型型号和版本

The model NO. and version will show in below interface .

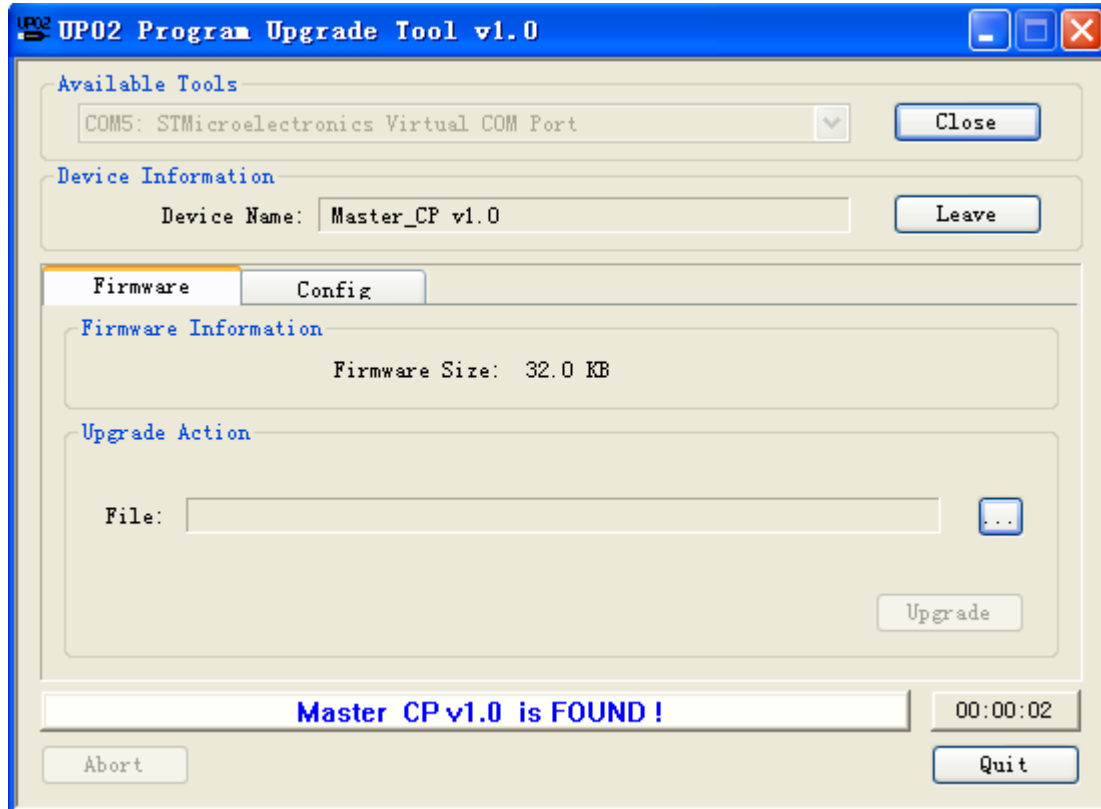

按 User Manual v1.0.pdf 说明操作。选择升级文件及升级操作

Please refer to User Manual V.10.PDF user manual, and select the upgrade document and upgrade steps.

附： enclosed with the user manual of the UP02.



# UP02适配器使用说明

## UP02 adaptor user manual

本产品用于三种不同插座的接收器升级转换。

1. 四芯：黑蓝黄红四线升级转换插头，用于间距1.25mm四芯直座的接收器升级。
2. 三芯：黑红蓝线和黑红黄线升级转换插头，用于间距1.25mm三芯直座的接收器升级。
3. 单线：黄色、蓝色和黑色单线升级转换插头，用于标准插座的接收器升级。

This adaptor used for connecting with UP02 and receivers with three different jacks to upgrade.

1. 4 cores jack: Plug the jack with black, blue, yellow and red four different colors' wire to the receiver's 4 cores jack which is 1.25 mm space between the 4 cores.
2. 3 cores jack: Plug the jack with black, blue and red three different colors' wire to the receiver's 3 cores jack which is 1.25 mm space between the 3 cores.
3. Single wire: Plug the jack with yellow, blue and black single wire to the standard receivers for upgrade.

