


Genius CP无刷升级方法


1. 取下头罩，将主电机连接线从接收器上取出，拧下主电机固定螺钉，取下主电机。
2. 将尾电机连接线从接收器上取出，取下尾部组件。
3. 装上升级尾部组件、升级主电机（齿轮啮合须顺畅）、升级调速板。
4. 按照升级连线示意图连接。

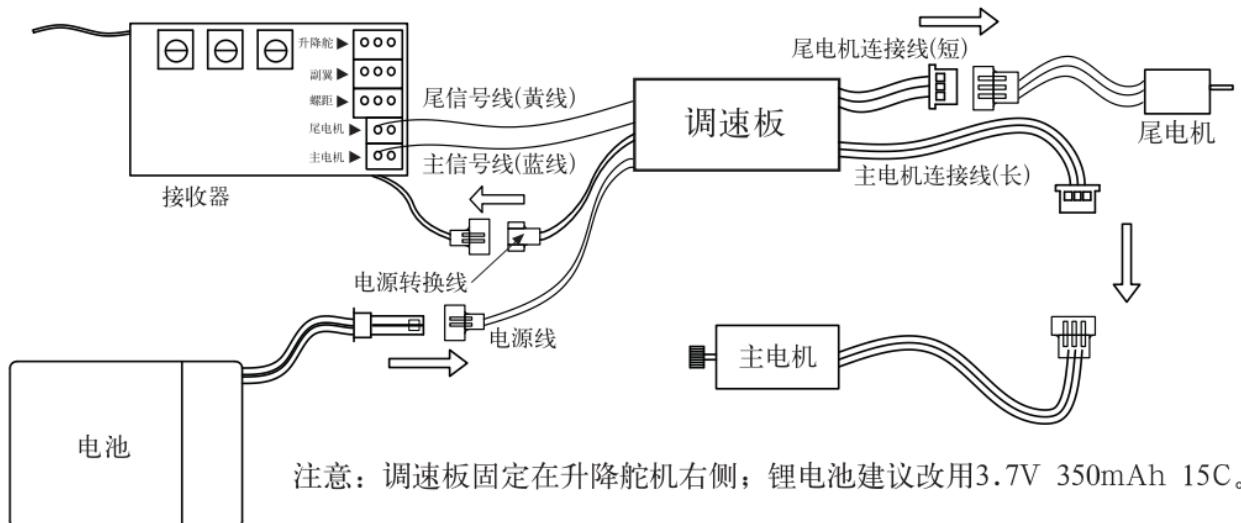

5. 将接收器上升降/副翼陀螺仪灵敏度减小，直到机身不出现震荡时为最佳。

Genius CP brushless motor upgrade steps

1. Remove the canopy, disconnect the main motor wire from the receiver, unscrew the fixing screw of the main motor, take off the main motor from the Genius CP.
2. Disconnect the tail motor wire from the receiver, and remove the tail part.
3. Install the upgrade tail part, upgrade main motor(The tooth joggle should be smooth) and upgrade ESC.
4. Please follow the illustration to connect the wires.

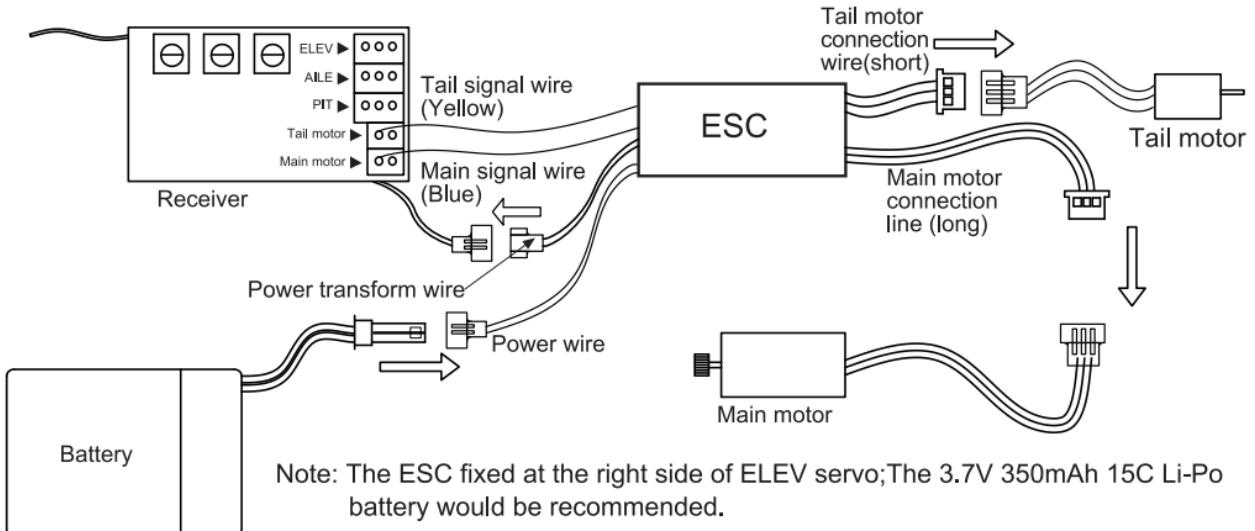

5. Decrease the AILE/ELEV gyro sensitivity in the receiver until the helicopter keeps stable(ie. No vibration)