## **14** Tail Unit Assembly

Secure the tail rotor hub(#11) on tail rotor shaft first, note the Set Screw(#3) should be right setting on the dot of the shaft. Do not forget to apply Loctite on the Set Screws. Do not over tighten the locknut(#4) with the two bearings. Next work on the housing assembly, use care to install the Tail Pitch Control Link, do not over tighten the selftapping Screw(#2). Make sure it is just tight and the link rotates freely.

Assemble the Tail Pitch Slider and Fork. Be careful when securing the Fork on the slider bushing, do not damage the bushing or it will not move smoothly on the tail rotor shaft.

