



## To Access Your Transmitter's Serial Number:

- Press and hold the roller then turn on the transmitter to enter System Setup mode.

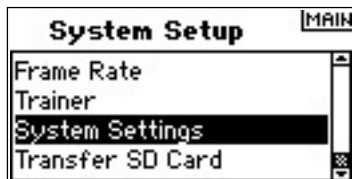

- Rotate the roller to highlight System Settings then press the roller. The following screen appears.

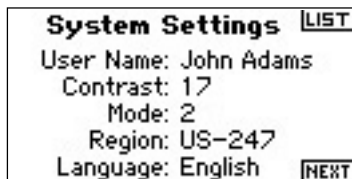

- Rotate the roller to highlight NEXT at the bottom right corner of the screen. Press the roller to access the Extra Settings (battery type) screen. Select NEXT again to show the Serial Number Screen. Use this serial number when registering your DX8.

