



1/4" square or round spar


①



2" Packing tape strip

Wing bottom: 40% of chord

Wing top: 100% of chord

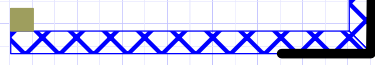

Bend this direction

②

③

Glue spar to bottom surface weight until glue dries

